

## Potenza Remote

### SET UP YOUR WIGHTMAN TV REMOTE TO CONTROL YOUR SET-TOP BOX

- Ensure that your Wightman TV remote control has batteries installed. TIP: Wightman TV remote uses two AA batteries.
- Press the STB button once. TIP: The STB button should light up.
- For Entone Kamai or Amino Amulet 6 Set-Top Boxes, press and hold SETUP and the number 7 until the STB button blinks twice.
- For Amino 140 or 540 Set-Top Boxes, press and hold SETUP and the number 1 until the STB button blinks twice.
- Test the TV remote with the Set-Top Box by trying to control your TV.



### SET UP YOUR WIGHTMAN TV REMOTE TO CONTROL YOUR TV

1. On your Wightman TV remote control, press TV once; the TV button will blink once. Then press and hold SETUP until the TV button blinks twice.
2. Press the numbers 9-9-1.
3. The TV button will blink twice.
4. Aim the remote control at your TV and press POWER once.
5. Slowly press and release the CH+ button repeatedly. Stop when the TV turns off. NOTE: In this search mode, the remote control will send codes from its library to the selected device, starting with the most popular code first.
6. Press POWER to turn your TV back on.
7. Press SETUP once to lock in the code. The TV button will blink twice to indicate that the code is saved. NOTE: If your TV does not turn on during step 6, repeat step 5 more slowly.

## Royal Big Button Remote

### SET UP YOUR WIGHTMAN TV REMOTE TO CONTROL YOUR SET-TOP BOX

- Ensure that your Wightman TV remote control has batteries installed. TIP: Wightman TV remote uses two AA batteries.
- For Entone Kamai or Amino Amulet 6 Set-Top Boxes, press and hold SETUP and the Green D button until the CABLE POWER button flashes twice.
- For Amino 140 or 540 Set-Top Boxes, press and hold SETUP and the Yellow A button until the CABLE POWER button flashes twice.



### SET UP YOUR WIGHTMAN TV REMOTE TO CONTROL YOUR TV

1. On your Wightman TV remote control, press and hold the SETUP button until it blinks twice.
2. Press the TV POWER button.
3. Press and hold the OK/SELECT button.
4. Let go of the OK/SELECT button when the TV turns off.

## Easy Clicker UR2-211 Remote

### SET UP YOUR WIGHTMAN TV REMOTE TO CONTROL YOUR SET-TOP BOX

- Ensure that your Wightman TV remote control has batteries installed. TIP: Wightman TV remote uses two AA batteries.
- Press and hold STB and OK/SEL buttons until the STB button lights up solid.
- Point the remote at the Set-Top box.
- For Entone Kamai Set-Top Boxes, press the numbers 2-5-8, and make sure the Set-Top Box turns off.
- For Amino 140 or 540 Set-Top Boxes, press the numbers 2-5-6, and make sure the Set-Top Box turns off.
- Press the STB button to store the change.



### SET UP YOUR WIGHTMAN TV REMOTE TO CONTROL YOUR TV

1. On your Wightman TV remote control, press the TV and OK/SEL buttons at the same time. The TV button will turn on indicating that it's ready to be programmed.
2. Aim the remote control at the TV.
3. Slowly press the CH+ button repeatedly. Stop when the TV turns off. NOTE: The remote control will send codes from its library to the selected device, starting with the most popular codes first.
4. Press the TV button after your TV has turned off. This will save the code. NOTE: If your TV does not turn on after step 4, repeat steps 1 through 4.