

Polaroid	10765, 10865, 11276, 11314, 11326, 11328, 11341, 11523, 11766, 12002
Portland	10451, 10092
Precision	10236, 10180, 10177
Prima	10761, 10783, 10815, 10817, 11785
Princeton	10700, 10717
Prism	10250, 10051
Proscan	11447, 10047, 10466, 11347
Proton	10178, 10466
Pulsar	10017, 10092
Pulser	10178, 10092
Quartz	10150, 10178
Quasar	10250, 10051, 10650
Rabbit	10047
RadioShack	10047, 10154, 10180, 10150, 10178, 10030, 10056
RCA	11447, 10047, 10054, 10000, 10051, 10093, 10178, 12002, 11958, 11781, 11547, 11347, 11247, 11147, 11047, 10774, 10679, 10090

Realistic	10047, 10154, 10180, 10150, 10178, 10030, 10056
RevolutionHD	11623
Runco	10017, 10060, 10030, 10497, 10603, 11292, 11398, 11629
Sampo	10047, 10030, 11756, 10762, 11755
Samsung	10047, 10054, 10017, 10154, 10060, 10812, 10702, 10178, 10030, 10056, 10587, 10766, 10814, 11060, 11575
Sanky	10060, 10030
Sansui	10463, 10060, 10030, 11409, 11935
Sanyo	10047, 10054, 10154, 10000, 10463, 10171, 10088, 10799, 10893, 11142, 11755
Saville	10060
Sceptre	10878, 11217, 11360, 11599
Scotch	10178
Scott	10236, 10180, 10178, 10030, 10177, 11711

Sears	10047, 10054, 10017, 10154, 10000, 10156, 10051, 10093, 10060, 10053, 10178, 10030, 10171, 10166, 10056
-------	---

Seleco	11351
Sharp	10054, 10093, 10180, 10491, 10688, 10689, 10818, 10851, 11602

Sheng Chia	10093
Shivaki	10178

Siemens	10145
Signature	10047, 10093, 10030

Simpson	10178, 10030
Singer	10060, 10092
Solar Drape	10000
Sole	10813, 11623

Sony	10017, 10154, 11100, 10000, 10150, 10053, 10834, 11685
------	--

Soundesign	10180, 10178, 10056
------------	---------------------

Sova	11952
Soyo	11520, 11826
Spectravision	10156, 10178
Squareview	10171
SR2000	10154, 10171
SSS	10180
Starlite	10236, 10180
Studio Experience	10843

Superscan	10093, 10864
Supreme	10000
SV2000	10054
SVA	10748, 10587, 10865, 10870, 10871, 10872

Sylvania	10047, 10054, 10154, 10000, 10051, 10178, 10030, 10171, 10178, 10092, 10056, 11271, 11314, 11394, 11864, 11963
----------	--

Symphonic	10000, 10180, 10178, 10171
-----------	----------------------------

Syntax	11144, 11240, 11331, 11610
--------	----------------------------

Tandy	10093
-------	-------

Tatung	10000, 10051, 11756, 11286
--------	----------------------------

Teac	10154, 10706, 10689
------	---------------------

Technics	10054, 10250, 10051
----------	---------------------

Technovox	10030
-----------	-------

Techview	10847, 12004
----------	--------------

Techwood	10250, 10051, 10060, 10056
----------	----------------------------

Teco	11040
------	-------

Teknika	10054, 10463, 10180, 10150, 10060, 10178, 10092, 10056
---------	--

Telecolor	10017
Telefunken	10702, 10056
Thomas	10047, 10178, 10056

Thomson	11447, 10047
TMK	10236, 10180, 10178, 10056, 10177

TNCi	10017
------	-------

Tocom	10156
-------	-------

Toshiba	10154, 11256, 10156, 10150, 11265, 10060, 11145, 10145, 10166, 12006, 11935, 11704, 11656, 11635, 11524, 11356, 11164, 11156, 10845, 10832, 10822, 10650
---------	--

Totevision	10051
Toyomenka	10178

Truetone	10250, 10051
----------	--------------

TruTech	11723
---------	-------

TVS	10463
-----	-------

Ultra	10092
-------	-------

Universal	10047
-----------	-------

Universum	10177
-----------	-------

US Logic	11286
----------	-------

V	11756, 10864, 10885, 11755
---	----------------------------

Vector Research	10030
-----------------	-------

Victor	10053
--------	-------

Vidikron	10054, 11292, 11398, 11629
----------	----------------------------

Vidtech	10178
---------	-------

Viewsonic	10857, 10864, 10885, 11330, 11578, 11627, 11640, 11755, 12014
Viking	10060
Viore	11684
Vizio	11756, 11758, 10864, 10885, 11755

Wards	10047, 10054, 10017, 10154, 10000, 10051, 10093, 10236, 10178, 10030, 10166, 10056, 10866, 11156
-------	--

Waycon	10156
--------	-------

Welton	10178
--------	-------

Westinghouse	10000, 10451, 10885, 10889, 10890, 11282, 11577, 11712
--------------	--

White	10451, 10236,
Westinghouse	10463, 10623, 10889

World	10451, 10236, 10463, 10180
-------	----------------------------

Wyse	11365
------	-------

XR-1000	10154, 10180, 10171
---------	---------------------

Yamaha	10030, 10769, 10833, 10839, 11526
--------	-----------------------------------

Yorx	10030
------	-------

Zenith	10047, 10017, 10000, 10093, 10463, 11265, 10812, 10178, 10030, 11145, 10145, 10171, 10092
--------	---

CARE

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the unit only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Wipe the remote with a damp cloth to keep it looking like new.

Modifying or tampering with the internal parts can cause damage and invalidate the warranty. If your remote is not performing as it should, please contact us at: **www.uei.com**.

SPECIFICATIONS

Power(2) AA
Size (H x W x D) 195 x 51.5 x 34 mm
Specifications are typical; individual units might vary. Specifications are subject to change and improvement without any notice.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been verified to comply with the limits for a class B computing device, pursuant to FCC Rules. In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment.

Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

67200BAO-XXX-R
07/09