

# WightmanTV Remote Set-Up Guide

## BEFORE STARTING:

Power on your TV through the TV itself or with the remote control that came with your TV. Ensure that your Wightman TV remote control has new batteries installed. *Note: Wightman TV remotes use two AA batteries.*

### SET UP YOUR WIGHTMAN TV REMOTE TO CONTROL YOUR **SET-TOP BOX**

### SET UP YOUR WIGHTMAN TV REMOTE TO CONTROL YOUR **TV**

## Nova Remote

- Press the STB button once. *Note: The STB button should light up.*
- To set up for Entone Set-Top Boxes (Kamai 5, Amulet 6, Kamai 7X, Amulet 7XM), press and hold SETUP and the Yellow button until the Set-Top Box blinks twice.
- To set up the Amino 140 or 540 Set-Top Boxes, hold SETUP and the Blue button together until the Set-Top Box blinks twice.



1. Press and hold the SETUP button until LED light blinks twice.
2. Press TV button.
3. Press and hold OK key.
4. Release key when device turns off.

## Potenza Remote

- Press the STB button once. *Note: The STB button should light up.*
- To set up the Entone Kamai or Amino Amulet 6 Set-Top Boxes, press and hold SETUP and the number 7 until the STB button blinks twice.
- To set up the Amino 140 or 540 Set-Top Boxes, press and hold SETUP and the number 1 until the STB button blinks twice.
- To test the Wightman remote with the Set-Top Box, press guide and channel change.
- To learn more about your remote, tune in to Wightman channel 991.



1. On your Wightman TV remote control, press TV once; the TV button will blink once. Then press and hold SETUP until the TV button blinks twice.
2. Press the numbers 9 9 1.
3. The TV button will blink twice.
4. Press and release the CH+ button once every second until the TV turns off. **NOTE:** In this search mode, the remote control will send codes from its library to the selected device, starting with the most popular code first.
5. If your TV turned off, press SETUP once to lock in the code. The TV button will blink twice to indicate that the code is saved. If your TV did not turn off, please restart steps 1-4.
6. Press POWER to turn your TV back on.

## Polaris Big Button Remote

- Press the CBL button once.
- Press and hold the setup button until the Cable button blinks twice.
- To set up Amino 140 / 540 put in code 1989 and press the SETUP button to lock in the code.
- To set up Kamai or Amulet Set-Top Boxes put in code 4437 and press the SETUP button to lock in the code.
- Test Guide, Menu and Changing channels.



1. Press the TV Power button.
2. On your Wightman TV remote control, press and hold the SETUP button until the TV Power key blinks twice.
3. Type 9 9 1.
4. Press CH+ repeatedly until TV turns ON and OFF.
5. Press SETUP button to save working code.